



# Changing Your Stylus – Follow the easy guide below to ensure your stylus is correctly fitted – remember always handle your stylus by the plastic parts except Metal Screw Type.

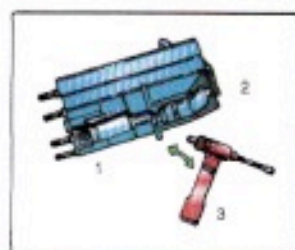


**CERAMIC CARTRIDGE 1**  
Turnover Type (Double Tip)

To change stylus, pull plastic holder 3 down and release from rubber guide 2 with gentle pressure. Pull down and forward and remove from retainer clip 1.

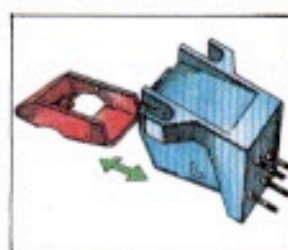

**MAGNETIC CARTRIDGE 1**

Stylus slides in and out – holding by plastic sides – use care.

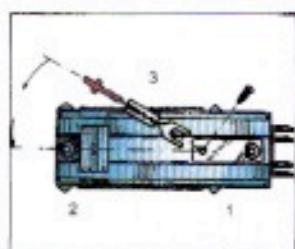


**CERAMIC CARTRIDGE 2**  
Screw in type (Single Tip)

Loosen screw 1 and move stylus 3 from rubber grommet 2 and pull out.




**MAGNETIC CARTRIDGE 2**

Slide stylus as indicated into tube locating hole – handle by plastic sides.

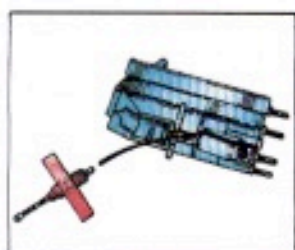

**CERAMIC CARTRIDGE 3**  
Clip-in type (Single Tip)

Same as ceramic type 1.

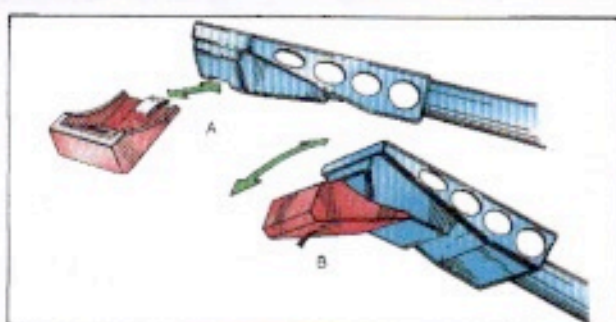



**MAGNETIC CARTRIDGE 3**

A and B Locate plastic lug into Cartridge and gently push home.

**Remember your Stylus should be changed once or twice a year depending upon use.**

**Stylus Care** – For best results we recommend you clean your stylus regularly with an Anti-Static Cleaner gently as illustrated.

Clean stylus as indicated – gently.

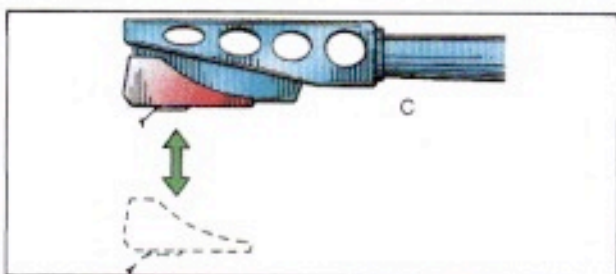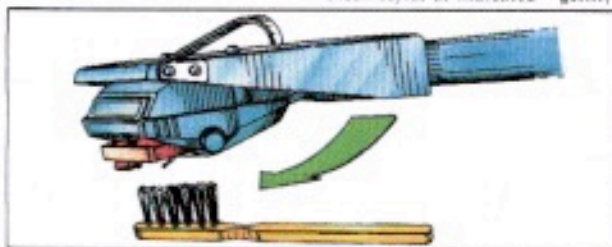

**MAGNETIC CARTRIDGE 4**

Pull stylus gently down.